varios segundos. y manténgalo en posición durante de cabello, cerca del cuero cabelludo, coloque el cepillo debajo de la sección 6. Para agregar volumen a la raíz,

el botón y aleje el cepillo del cabello. demasiado rápido, simplemente afloje requiere práctica. Si el cepillo gira iMPORTANTE! Esta técnica

alisar el cabello más rápidamente. el cepillo hacia abajo. Esto ayudará a 5. Cree tensión, jalando ligeramente

botón adecuado.

el cepillo hacia dentro, oprimiendo el 4. Al llegar a las puntas, haga gırar 'selund sel

cabelludo, y bájelo lentamente hacia sección de cabello, cerca del cuero 3. Coloque el cepillo debajo una

de temperatura deseado, según su 2. Encienda el aparato y elija el nivel ssegurarse de que esté desenredado.

uniformes. Peine el cabello para 1. Divida el cabello en secciones volumen y cuerpo obtener máximo

Consejos para

by Conair®. forma con el cepillo de aire giratorio InfinitiPro Cuando su cabello esté seco al 80%, póngalo en

delante durante el secado. mas volumen al cabello, incline la cabeza hacia para eliminar el exceso de humedad. Para dar recomendamos que lo preseque con un secador

Si su cabello es muy largo o abundante, le

# DE N20 INSTRUCCIONES

protege las cerdas, mantemendo su lorma desbues de cada uso. La cubierta protectora Cubra el cepillo con la cubierta protectora Cubierta protectora

beiusqos cou uncuo cnerpo y brillo. óptimos, utilice la función rotativa para crear CIONARA CON EL AIRE TITO. PARA ODIENET RESUITADOS tura/velocidad bajo o alto solamente. No funrotativa puede usarse con ajuste de temperaen sentido norario o antinorario. La tuncion qesesqo' << 0 >>' bara hacer girar el cepillo direcciones. Simplemente oprima el botón El cnerpo del cepillo puede girar en ambas Función rotativa

rotativa no funcionará con este ajuste. estilos que duran más tiempo. Nota: la funcion Aire frio (COOL): Ideal para fijar el peinado, para

bejust el cabello grueso. Alto (HIGH): Perfecto para presecar el cabello y


danado o tratado. Rajo (LOW): Perfecto para el cabello fino, 2 velocidades/3 ajustes de temperatura

hermosos, brillantes y sin frizz. qsijos canasdos por éste y ofrece resultados distribución unitorme del calor, lo que evita los El cuerpo de cerámica del cepillo asegura una Tecnologia cerámica

cabello sedoso y dócil, para que sea más fácil ia estatica, suavizando la cuticula y dejando el negativos que neutralizan la carga positiva de deuerador de iones del cepillo produce iones pacen que sea más dificil peinar el cabello. El uiveles de estatica también producen irizz y

estatica, naciendo que la cuticula se vuelva mas cepiliar o secar el cadello con toalia puede crear ia contaminacion, electrizan el cadello. Hasta el aire acondicionado, las fibras artificiales y Muchos factores ambientales modernos, incluso Tecnologia ionica verdadera

áspera y que el cabello pierda su brillo. Altos

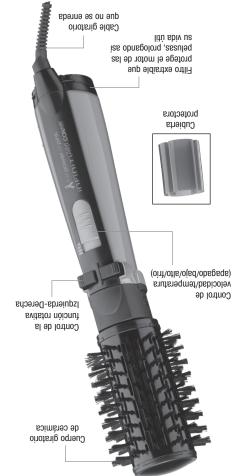

CEPILLO DE AIRE FAMILIARICESE CON SU cabello con champúes, acondicionadores y prode cadello dien mantenido. Siempre cuide su La mejor apariencia empieza por un recorte GUIA PARA UN SUPER PEINADO

ductos de peinado de calidad superior.

autorizado. No intente reajustario. tante que lo mande a un centro de servicio

centro de servicio autorizado. nara correctamente, regrese el aparato a un 4. Si el cortacircuito de seguridad no funcio-

5. Si el aparato cayera al agua, es muy impor-



Cable profesional

Cubierta protectora

Cepillo multidireccional

**CARACTERISTICAS** 

Función giratoria opcional

Filtro articulado fácil de limpiar

2 direcciones de rotación, para un control

Cuerpo de cerámica de 2 pulgadas (5 cm)

Acondicionamiento iónico, para mayor brillo

celqsa snaves snavizan ei cabello y dan brillo.

lo proporciona cuerpo y volumen mientras las

bara crear hermosos peinados, con mucho

oprener resultados protesionales en casa.

cuerpo y brillo. El cuerpo de cerámica del cepil-

El cepillo giratorio InfinitiPro by Conair® es ideal

qe nu cebillo à qe nu secador de cabello para

aire revolucionario que combina los beneficios

diámetro InfinitiPro by Conair® es un cepillo de

El cepillo giratorio de 2 pulgadas (5 cm) de

de diametro con cerdas antiestaticas suaves

Z ajustes de temperatura, más aire frio



Oprima el botón de reajuste y vuelva a conectar 3. Para reajustarlo, desconecte el aparato.

y el botón de reinicio saltará. 2. El aparato dejará de funcionar. Se oirá un clic

prueba (véase el gráfico más abajo). 1. Enchufe el aparato y apriete el botón de

sistema de detección de agua funcione corla prueba siguiente para asegurarse de que el nmediatamente si este cayera ai agua. Haga Circuit Interrupter), que apaga el aparato de seguridad Ilamado ALCI (Appliance Leakage Este abarato esta dotado de un coltacircuito

Slide switch

with 3 heat/

speed settings:

cover included

Removable filter prevents

damaging lint buildup

and extends motor life

low/high/cool

**OSU ADAD 30 SETNA** PRUEBE EL CORTACIRCUITO DE SEGURIDAD

incendio electrico. que la del circuito. Esto podria provocar un durante el uso. Permita que enfrie antes de bisce el fusible por uno de mayor capacidad

activar el interruptor de circuito. NUNCA reemcou el mismo fusible que otros aparatos podria El usar este aparato en el mismo circuito o

**GUIA DE OPERACION PARA LOS APARATOS** - **3TNATRO9MI** 

CISTA. NO INTENTE IF EN CONTRA DE ESTA TUNCION DE completamente, comuniquese con un electride corriente, inviértela. Si aun no entrara corriente polarizada. Si no entrara en la toma enciniar de una sola manera en la loma de otra). Como medida de seguridad, se podra ciavija poianzada (una pata es mas ancha que El cable de este aparato está dotado de una

mente con Corriente Alterna (60 Hz) de 110 a Para uso domestico solamente. Uselo sola-

DE OPERACIÓN INSTRUCCIONES INSTRUCCIONES **GUARDE ESTAS** 

15. No utilice este aparato con un convertidor

las adefluras de aire. durante el uso. Mantenga su cabello alejado de 14. Mantenga su cabello alejado del aparato mientras este tuncionando.

12. El aparato se vuelve muy caliente

11. No dirija el aire caliente hacia los ojos u

10. No utilice una extensión con este aparato.

aerosol (spray) o donde se esté administrando

8. Nunca deje caer ni inserte un objeto en nin-

obstruir. Mantenga las aberturas libres de pelu-

como una cama o un sota, donde se puedan

colodne el abatato en nua superticie bianda,

calientes. No jale, retuerza ni enrolle el cable

o: Mantenga el cable alejado de superticies

aparato a un centro de servicio autorizado

caido o si estuviese danado. Regrese ei

undiese tuncionado mai o que se nudiese

4. No opere este aparato si el cordón o la

según las instrucciones. Sólo use accesorios

o cerca de niños o personas con alguna dis-

2. Este aparato no deberia ser usado por, sobre

3. Utilice este aparato unicamente con el

propósito para el cual fue diseñado y solamente

lecomendados por el tabricante

clavija estuviesen dañados, después de que

para su revision, reparacion o ajuste.

airededor dei aparato, inciuso para aimacenario.

6. Nunca bloquee las aberturas de aire ni

cionar donde se estén usando productos en

9. No lo utilice en exteriores, ni lo haga tun-

. Nunca utilice este aparato mientras este

sas, cabellos y elementos similares.

olyas areas sensibies ai caior.

guna de las aberturas.

qormido/a o adormiiado/a.

riesgo de quemaduras, electrocucion, incendio o 13. No coloque el aparato en ninguna superficie ADVERTENCIA – Para reducir el

inmediatamente. No toque el agua. 5. Si el aparato cayera al agua, desconéctelo

nientras este conectado.

. Nunca deje el aparato desatendido

4. No coloque el aparato ni lo deje caer al agua

bnegs cset o set embujado a una banera o un 3. No colodue ni guarde este producto donde

5. No lo use en el bano o la ducha. mente despues de usario.

1. Siempre desconecte el aparato inmediata-

Para reducir el riesgo de muerte o herida por bermanece bajo tensión, aunque esté apagado.

PELIGRO - Cualquier aparato enchufado DEL AGNA

MANTENGALO ALEJADO **OJRAZU 30 SETNA** INSTRUCCIONES **LEA TODAS LAS** 

las cuales las siguientes: tomar precauciones básicas de seguridad, entre esbecisimente en la presencia de ninos, debe

Siempre que use aparatos electricos, **Satnatroqmi** SEGURIDAD **MEDIDAS DE** 

# **IMPORTANT SAFETY INSTRUCTIONS**

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

# **READ ALL INSTRUCTIONS BEFORE USING** KEEP AWAY FROM WATER

**DANGER** — Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

#### 1. Always unplug appliance immediately after using.

- 2. Do not use while bathing or in a shower. 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 4. Do not place in, or drop into, water or other
- 5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

# **WARNING** — To reduce the risk of

burns, electrocution, fire, or injury to persons: 1. This appliance should never be left unattended when plugged in.

2. This appliance should not be used by on. or near children or by individuals with certain

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

#### 4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged or dropped into water. Return the appliance to a Conair service center for examination

5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around appliance, even during storage.

- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the
- 7. Never use while sleeping.
- 8. Never drop or insert any object into any
- 9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 10. Do not use an extension cord to operate hot air styler
- 11. Do not direct hot air toward eyes or other heat-sensitive areas. 12. Hot air styler will be hot during use.
- Allow to cool before storing. 13. Do not place appliance on any surface while
- it is operating. 14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets. 15. Do not use with voltage converter.

**SAVE THESE INSTRUCTIONS** 

# **OPERATING INSTRUCTIONS**

This appliance is intended for household use only. Use on Alternating Current (60 hertz) only. Standard hot air stylers are designed to operate at 110 to 125 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

### IMPORTANT -500 WATT OPERATING GUIDE

Use of this hot air styler on the same circuit or fuse with other electrical products or appliances may trip the circuit. **NEVER replace the fuse** with one rated higher than the capacity of the circuit. Doing so could result in an elec-

**CHECK ALCI SAFETY FEATURE EVERY TIME** YOU USE APPLIANCE.

This appliance is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water. To make sure the ALCI is functioning properly, perform the following test. The purpose of this test is to allow you to make sure the water sensing system (ALCI) is working.

- 1. Plug in the appliance and press test button on plug (see appropriate diagram).
- 2. The appliance will stop working. There will be an audible click and reset button will pop out.
- 3. To reset ALCI with a reset button, unit should be unplugged. Then push reset button in and reinsert plug into outlet.





#### 4. If ALCI is not functioning properly, return appliance to service center.

5. It is important that if immersion occurs, this unit be brought to a service center. Do not try

#### SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

The Infiniti Pro by Conair™ 2-in. Spin Air Brush is an innovative, revolutionary hot air styler that has effectively eliminated the need for a hairbrush and dryer and brought salon quality results to your home.

The Infiniti Pro by Conair™ Spin Air Brush is perfect for adding gorgeous volume and shine to styles. The large ceramic barrel gives fullness and body as you style, while the soft bristles create ultimate shine and smoothness.

## **FEATURES**

- 500W
- High-shine true ionic conditioning
- 2-in, ceramic barrel with soft, anti-static brush bristles
- 2 heat settings plus cool setting
- 2 rotation directions for total control
- Use with or without spin function
- Multi-directional brush · Easy-to-clean hinged rear filter
- Protective brush cover
- · Professional power cord

#### **True Ionic Technology GET TO KNOW YOUR STYLER**

Left-Right

Many aspects of modern living, including air conditioning, contact with man-made fibers and air pollution, contribute to a buildup of static electricity in the hair. Even brushing and Rotating ceramic towel-drying the hair can increase these levels, causing the surface of the cuticle to become rough. Consequently, hair may have a dull appearance

Also, high levels of static charge cause hair to become flyaway and difficult to style. The ion generator produces a stream of negative ions that act to neutralize the static charge, smoothing the cuticle for shiny, smooth and manageable hair, so you can achieve your desired style easily.

### Ceramic Technology

The rotating barrel delivers even ceramic heat eliminating damaging hot spots for beautiful frizz-free shine.

#### 3 Heat/Speed Settings

Low Setting: This position combines ideal air flow and temperature setting for shaping finer, damaged or treated hair.

High Setting: Combines ideal airflow with higher temperature, especially recommended for pre-drying, and also for styling thick hair.

Cool Setting: Using the cool setting at the end sets the style for a long-lasting effect. The rotation/spin function is not needed for cool setting so that style can easily be set.

#### **Rotation Settings**

There are two rotation speed settings. To make the brush head rotate, press the buttons marked << and >>. These will make the brush head rotate clockwise and counterclockwise. The rotation can be used on the low and high settings. When the appliance is used on the cool setting, the brush head will not rotate. For best results, use the rotating brush feature to create styles with gorgeous volume and shine. You can also use the hot air styler without the rotation function.

### **Protective Cover**

After every use, always ensure that the protective shield is placed over the brush head. This protects the bristles and keeps them from being damaged.

# INSTRUCTIONS **FOR USE**

If you have long or thick hair, you may find it quicker and easier to use a hair dryer first to dry your hair and remove the excess moisture. For added volume, turn your head upside down

Once the hair is 80% dry, you should start to create your style using the Infiniti Pro by Conair™ Spin Air Brush.

### Styling Tips For Maximum

- 1. To turn the appliance on, select the correct heat setting for your hair type.
- 2. Start by sectioning the hair. Be sure to comb through hair so it's detangled.
- **3.** Place the appliance into the hair, close to the roots, and brush through the section.
- 4. Move the brush through the hair toward the ends, and as you reach the end of the section, start to rotate the brush away from your head by pressing and holding the appropriate rotate button.
- **5.** As you do this, resist the rotation of the brush by pulling the brush downward. Tension created through the section of hair will help to smooth hair faster.


**IMPORTANT!** It may take several attempts to perfect this technique. If the brush spins too quickly, simply release the rotation button and remove styler from the hair.

**6.** For added root lift, hold the brush in place at the roots for a few seconds.

7. For even more volume, allow the brush to rotate, winding the entire

bc178bcrw\_11pa122839 corrected\_ib\_final.indd 6/10/11 2:15 PM







section of hair around the barrel. Release the rotate button and then leave the brush in the hair for a few

INFINITI///CONTE

**8.** To release the section, press and hold the opposite rotation button to unwind the hair section.

seconds. Use cool setting to set style.

**9.** Repeat as necessary.

**10.** For less volume, you can follow the same steps and use without the spin function.

11. After use, switch off and unplug the appliance.

**12.** Allow to cool before storing.

**13.** Place protective shield over brush head to protect the bristles.

#### Helpful Hints and Tips

- To define layers and give shape to styles, follow step 4 and repeat through section.
- To get root volume and body through the top section of hair, follow steps 3 to 6 but using an upward motion.
- You can create flips or tuck hair under. Also perfect for shaping bangs.

7475 N. Glen Harbor Blvd., Glendale, AZ 85307 150 Milford Road, East Windsor, NJ 08520 ©2011 Conair Corporation VISITENOS EN WWW.CONZII.COM/INTINIȚI

o Infiniti by Conair®, llame al 1-800-3-CONAIR o Para más información sobre los productos Conair® Glendale, AZ 85307

7475 N. Glen Harbor Blvd. гегисе пераптепт Conair Corporation Service Center

95822TA4TI

visitenos en: www.conair.com/registration. Para registrar su producto,





INFINITI PRO BY CONAIR BCRF PRUEBE OTROS PRODUCTOS

que varian de un Estado a otro. esbeciticos y usted puede tener otros derechos Esta garantia le otorga derechos legales mencionadas pueden no regir para usted. consecuentes, de modo que las limitaciones limitación de daños especiales, incidentales o Algunos Estados no permiten la exclusion o

GARANTIA, EXPRESA O IMPLÍCITA. NCUMPLIMIENTO DE ESTA O CUALQUIER OTRA INCIDENTAL O CONSECUENTE DEBIDO AL иіисии сазо ров иіисии dano especial, CONAIR NO SERÁ RESPONSABLE EN

mencionadas pueden no regir para usted. garantia implicita, de modo que las limitaciones bermiten imitaciones sobre la duración de una GARANTIA ESCRITA. Algunos Estados no POR LOS, 36 MESES DE LA PRESENTE PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS DE COMERCIABILIDAD Y APTITUD PARA UN PERO NO LIMITADAS A LA GARANTIA IMPLICITA RESPONSABILIDAD IMPLICITAS, INCLUYENDO CUALQUIER GARANTIA, OBLIGACION O

la fecha de fabricación. período de garantía será de 36 meses a partir de envio. En ausencia del recibo de compra, el 1-800-3-CONAIR para recibir instrucciones de qsr nus brueba de compra y deben llamar al envio. Los residentes de Cainornia solo necesitan giro postal de US\$7.00 por gastos de manejo y Inuro cou an tecipo de compra y un cuedue o al Centro de Servicio indicado a continuacion, técnico bajo esta garantía, regrese su aparato de materiales o tabricación. Para obtener servicio bartir de la fecha de compra si presentara defectos aparato sin cargo por un periodo de 36 meses a Conair reparará o remplazará (a su opción) su

**GARANTIA LIMITADA DE TRES ANOS** 

este sueita y recta. cnejane o dne ja jnuta dne jo couecta aj secador alrededor del aparato. Permita que el cable fuera del alcance de los niños. No enrolle el cable que enfrie y guárdelo en un lugar seco y seguro Desbués de usar el aparato, desconèctelo, permita ALMACENAJE – IMPORTANTE

nn centro de servicio autorizado. No trate de aparato no funcionase correctamente, regréselo a Zi el cable o el aparato estuviesen danados o si el

funcionara de manera intermitente. dañado o si el aparato dejara de funcionar o aparato inmediatamente si el cable parece asegurarse de que no esté dañado. Deje de usar el juzbeccione el cable con frecuencia para aparato, produciendo su ruptura o un cortocircuito. ESTO POORTA DARRE 18 JUNIA TIEXIBIE QUE 10 CORECTA AI Nunca lo enrolle con tuerza alrededor del aparato. NUNCA jale, retuerza ni doble mucho el cable.

de due las ventilaciones de aire esten limpias. minutos antes de encenderio de nuevo. Asegurese el aparato y permita que enfrie durante 10 a 15 ai aparato o heridas. Si esto sucediera, desenchute la temperatura automáticamente para evitar daños sistema de seguridad apagará el aparato o cortará bloqueadas u obstruidas. Si esto ocurriera, un

se recalentará si las aberturas de aire estuvieran solo se debe limbiar con un pano limbio. El aparato de nus aspiradora. La superticie exterior dei aparato sile cou nu cebillo bedneuo o el cebillo sccesollo A asdne ei boivo y las peiusas de las aberturas de necesario limpiario, desconectelo, permita que entrie rectamente, debe mantenerio limpio. Cuando sea necesita lubricación. Para que funcione cor-Su aparato requiere poco mantenimiento. No

# OTNJIMINJINAM **INSTRUCCIONES DE**

puede salvar una vida. (Interruptores de circuito

corriente, deteniendo el flujo de electricidad. inmediatamente a una pequeña pèrdida de \*Un GFCI es un dispositivo sensible que reacciona

ella, el precio es bajo! ¡No espere...instale uno IUn GFCI puede salvar su vida! ¡Comparado con

GFCI ofrece más proteccion. le protegerá en esta situación. Un interruptor de circuito regular no este apagado. Un fusible o un muerte... aunque el interruptor ejectrica podria causar su

al agua mientras esté conectado, una descarga y et agua no depen juntaise. Si su aparato cayera POR QUE NECESITA UN GFCI? La electricidad

equipados con GFCI. las partes exteriores de las casas nuevas sean npicados en los cuartos de baño, los garajes y de Electricidad ahora exige que todos los enchutes permanente que él instalará. El Código Nacional se conecta a la toma de corriente o un sistema sistema escoger - un sistema amovible que on electricista le puede ayudar a decidir cuai DE BAÑO, INSTALE UN GFCI\* AHORA! ISI DEBE USAR EL APARATO EN EL CUARTO

No sumerja este aparato en el agua u

# **IMPORTANTE**

coura ialias a tierra)...

**NTERRUPTERS** TIUORI TJUA ROUND

Este mensaje sobre los...

proiongara la vida util dei motor. suave, para evitar que el motor sobrecaliente. Esto • Limpie el filtro regularmente, usando un cepillo completamente antes de volverlo a usar. ligeramente humedecido. Permita que seque Fimbie el cuerpo del aparato con un paño

completamente antes de limpiarlo. Descouecte el abarato y permita que enfrie

# **OTNJIMINJENTO** Y AZZIMMIJ

dar forma a los flequillos. doblar las puntas hacia dentro/fuera y • También puede usar el cepillo para

cabello hacia arriba.

siga los pasos 3 a 6, estirando el cnerpo a la parte superior del cabello, Para agregar volumen a la raiz y

baso 4 con cada sección de cabello. poner peinados en forma, siga el • Para dar definición a las capas y

### Consejos útiles

brotectora para proteger las cerdas. 13. Cubra el cepillo con la cubierta

12. Permita que enfrie antes de

'osn jep sendsep

11. Apague y desconecte el aparato

sin la función rotativa. cabello, utilice la misma técnica, pero 10. Para dar menos volumen al

necesano.

9. Repita cuantas veces sea cepillo en la otra dirección.

8. Para liberar el cabello, haga girar el Utilice el aire trio para tijar el peinado. eu bosicion durante unos segundos.

función rotativa y mantenga el cepillo cuerpo. Afloje el botón para activar la envolviendo el cabello alrededor del

# **CLEANING & MAINTENANCE**

- Unplug the appliance and let cool completely before cleaning it.
- Use a damp cloth to clean carefully. Make sure the appliance is completely dry before using again.
- The rear filter should be cleaned on a regular basis with a soft brush to help prevent buildup and overheating. This will also prolong the motor life.



This message about...

NTERRUPTERS

...can save a life!

### **IMPORTANT** Never immerse this product in water

or any other liquid. IF YOU MUST USE YOUR HOT AIR STYLER IN

THE BATHROOM, INSTALL A GECI\* NOW! Your local electrician can help you decide which type is best for you - a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code

outdoor outlets of all new homes. WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hot air styler falls in water while it's plugged in, the electric shock can kill

now requires GFCIs in the bathrooms, garages, and

you... **even if the switch is off.** A regular fuse or circuit breaker won't protect vou under these circumstances. A GFCI offers you far greater protection

A GFCI can save your life! Compared to that, the price is small! Don't wait... install one now!

\*A GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

# **USER MAINTENANCE**

Your hot air styler is virtually maintenance free. No lubrication is needed. For proper operating performance, the hot air styler must be kept clean. When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the hot air styler should be wiped clean with a cloth only. Blocked or clogged air intake vents will cause the hot air styler to overheat. If overheating occurs, an automatic safety device will shut the hot air styler or the heat off to prevent damage or personal injury. If the unit or the heat turns off. unplug the cord and allow the hot air styler to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

### CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the hot air styler. Damage will occur at the high flex point of entry into the hot air styler, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates

If the cord or hot air styler is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

#### STORAGE - IMPORTANT

When not in use, your hot air styler should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not wran line cord around hot air styler. Allow the cord to hang or lie loose and straight at the point of entry into the hot air styler.

### LIMITED THREE-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$7.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 3 years from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SHALL BE LIMITED IN DURATION TO THE 36-MONTH DURATION OF THIS WRITTEN. LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED WHATSOEVER.

Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

## TRY OUR OTHER INFINITI PRO BY CONAIR BCRF PRODUCTS



Ceramic Styler

**Models CD117BCR** 

and CD117BCRUL

Please register this product at: www.conair.com/registration

### **Service Center**

Conair Corporation Service Department 7475 N. Glen Harbor Blvd. Glendale, AZ 85307

For information on any Conair or Infiniti by Conair product, call 1-800-3-CONAIR or visit us on the web at: www.conair.com/infiniti

©2011 Conair Corporation 150 Milford Road, East Windsor, NJ 08520 7475 N. Glen Harbor Blvd., Glendale, AZ 85307

11PA122839



## infiniti*ppo*,conair 2 in. (5 cm) **Spin Air** Brush



bc178bcrw 11pa122839 corrected ib final.indd 6/10/11 2:15 PM